


# USER MANUAL OELCHECK App 4.0

Easy. Innovative. Fast. Digital.

## Sample entry | How to proceed

### with QR code

1. Click **Enter with QR code** in the start menu.
2. Scan the QR code affixed onto your machine.

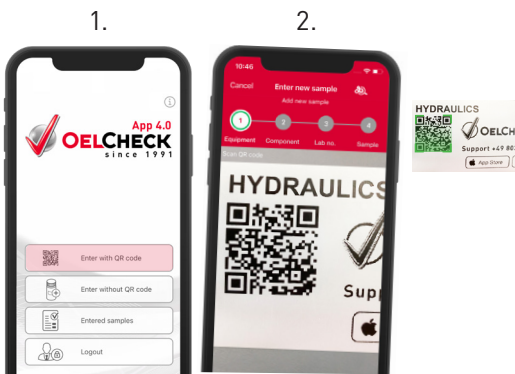

or


### without QR code

1. Click **Enter without QR code** in the start menu.
2. Choose the corresponding machine.



3. Choose the corresponding component.
4. Scan the barcode (lab number) of your Sample Information Form. You can also enter the number manually. The lab number can be found on the bottom left, in the middle as well as on the top right on the Sample Information Form.
5. Add missing data.
6. Confirm with **Submit**. Your data is now transferred to OELCHECK.

Sample entry is now completed!

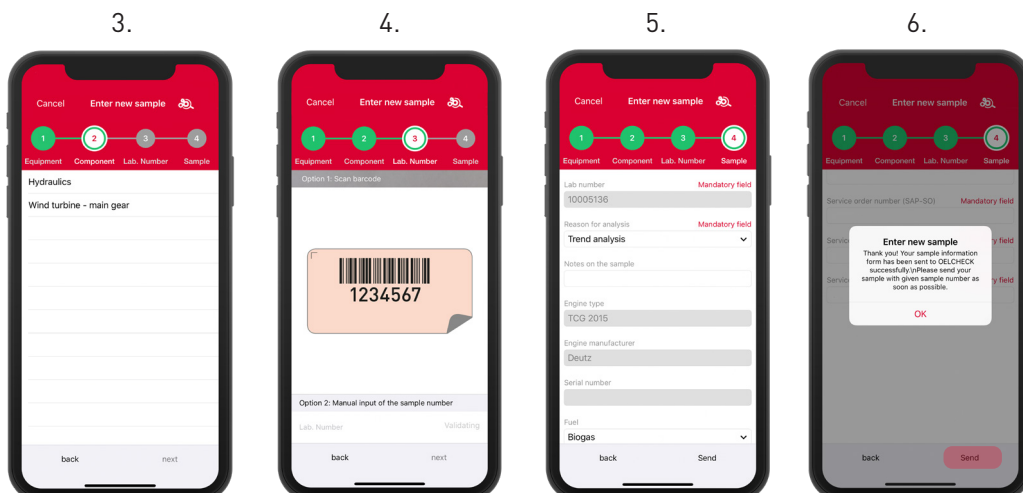

## Helpful


### Have you completed the data entry via the app?

Then tick off "**Sample information provided online**" on the Sample Information Form ...

Zeit sparen! QR-Code scannen, Probe online eingeben!  
Save time! Scan QR-Code, enter sample data online!

Sample information provided online

and stick the bar code from the Sample Information Form on the sample bottle, then send the sample to us.



### You do not have a QR code yet?

Upon request, we will send you your QR codes as practical, oil- and weather-resistant QR code stickers.

Call us at: **+49(0)8034-9047-250**  
or send us an email: [sales@oelcheck.de](mailto:sales@oelcheck.de)



### Information symbol

The information symbol in the top right shows the current version of the app and when your data was last synchronized.

